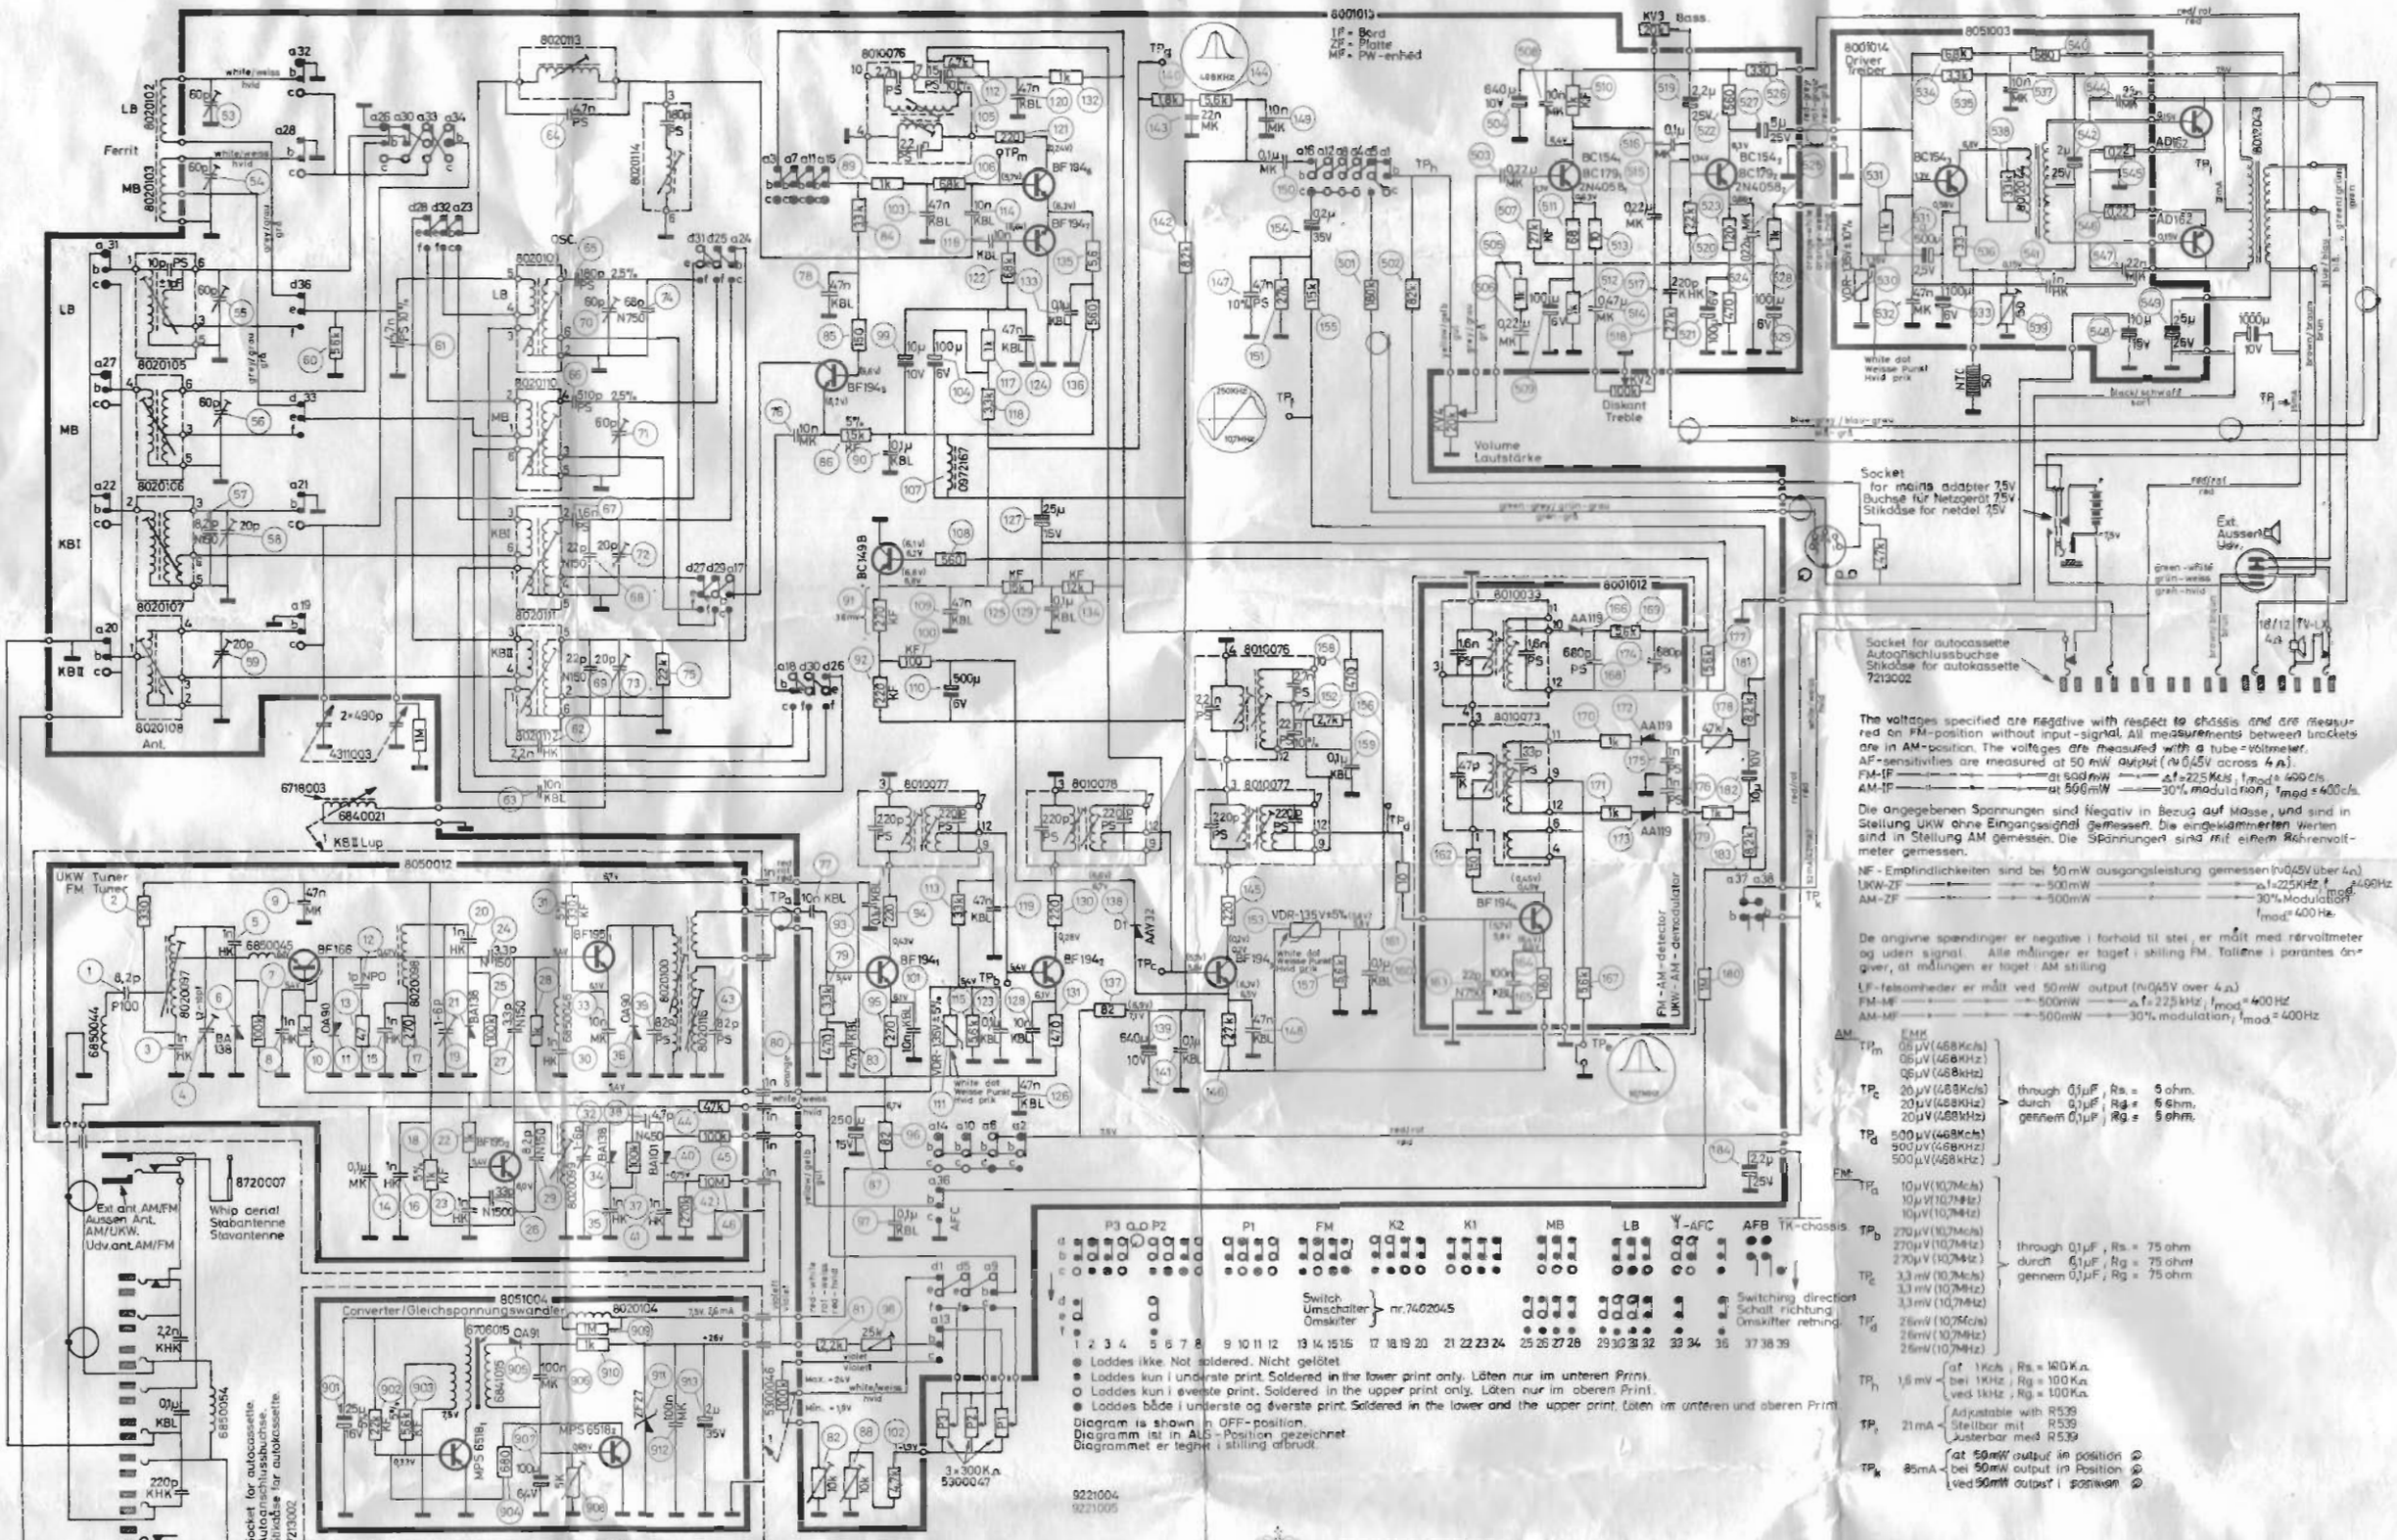

The voltages specified are negative with respect to chassis and are measured on FM-position without input-signal. All measurements between brackets are in AM-position. The voltages are measured with a tube-voltmeter.
AF-sensitivities are measured at 50 mW output (= 0,45V across 4 Ω).
FM-IF ——— at 500mW ——— Δf = 225 Kc/s, f_{mod} = 400 c/s.
AM-IF ——— at 500mW ——— 30% modulation, f_{mod} = 400 c/s.

Die angegebenen Spannungen sind Negativ in Bezug auf Masse, und sind in Stellung UKW ohne Eingangssignal gemessen. Die eingeklammerten Werten sind in Stellung AM gemessen. Die Spannungen sind mit einem Röhrenvolt-meter gemessen.

NF-Empfindlichkeiten sind bei 50 mW ausgangsleistung gemessen (= 0,45V über 4Ω)
UKW-ZF ——— 500mW ——— Δf = 225KHz, f_{mod} = 400Hz
AM-ZF ——— 500mW ——— 30% Modulation, f_{mod} = 400 Hz.

De angivne spændinger er negative i forhold til stel, er målt med rørvoltmeter og uden signal. Alle målinger er taget i stilling FM. Tallene i parantes ån-giver, at målingen er taget i AM stilling

LF-følsomheder er målt ved 50 mW output (= 0,45V over 4 Ω)
FM-MF ——— 500mW ——— Δf = 225 kHz; f_{mod} = 400 Hz
AM-MF ——— 500mW ——— 30% modulation; f_{mod} = 400 Hz

AM:

	EMK	
TP_m	0,5 µV (468 Kc/s)	
	0,5 µV (468 KHz)	
	0,6 µV (468 kHz)	
TP_c	20 µV (468 Kc/s)	through 0,1 µF, Rs. = 5 ohm.
	20 µV (468 KHz)	durch 0,1 µF, Rg = 5 ohm.
	20 µV (468 kHz)	gennem 0,1 µF, Rg = 5 ohm.
TP_d	500 µV (468 Kc/s)	
	500 µV (468 KHz)	
	500 µV (468 kHz)	

FM:

TP_a	10 µV (10,7 Mc/s)	
	10 µV (10,7 MHz)	
	10 µV (10,7 MHz)	
TP_b	270 µV (10,7 Mc/s)	
	270 µV (10,7 MHz)	through 0,1 µF, Rs. = 75 ohm
	270 µV (10,7 MHz)	durch 0,1 µF, Rg = 75 ohm
TP_c	3,3 mV (10,7 Mc/s)	gennem 0,1 µF, Rg = 75 ohm
	3,3 mV (10,7 MHz)	
	3,3 mV (10,7 MHz)	
TP_d	26 mV (10,7 Mc/s)	
	26 mV (10,7 MHz)	
	26 mV (10,7 MHz)	

TP_h	1,6 mV	at 1 Kc/s, Rs. = 100 K.n.
		bei 1 KHz, Rg = 100 K.n.
		ved 1 kHz, Rg = 100 K.n.
TP_i	21 mA	Adjustable with R539
		Stellbar mit R539
		Justerbar med R539
TP_k	85 mA	at 50 mW output in position
		bei 50 mW output in Position
		ved 50 mW output i position

FONO. 1966 9531004

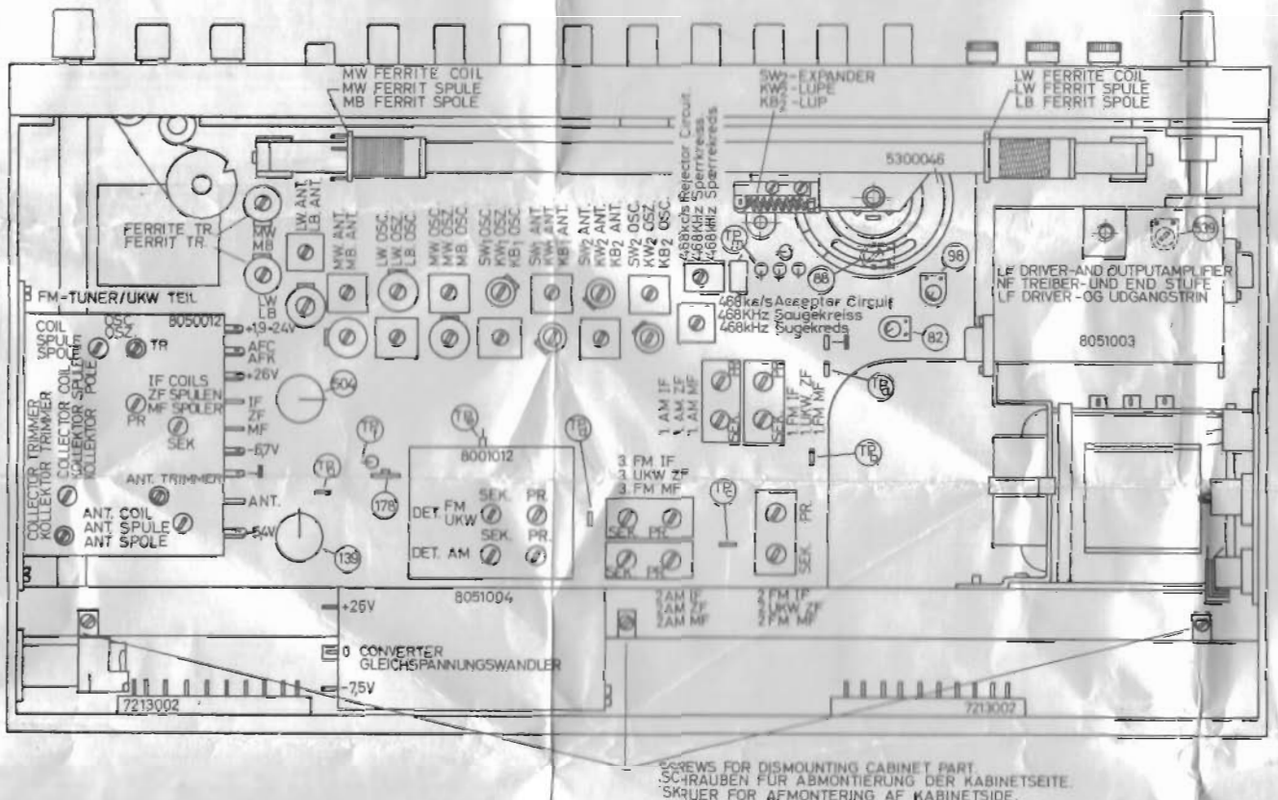
MW FERRITE COIL
MW FERRIT SPULE
MB FERRIT SPOLE
SW2-EXPANDER
KW2-LUPE
KB2-LUP
LW FERRITE COIL
LW FERRIT SPULE
LB FERRIT SPOLE
5300046
FERRITE TR.
FERRIT TR.
FM-TUNER/UKW TEIL
8050012
LF DRIVER-AND OUTPUTAMPLIFIER
NF TREIBER- UND END STUFE
LF DRIVER -OG UDGANGSTRIN
8051003
8001012
8051004
7213002
7213002
+26V
CONVERTER
GLEICHSPANNUNGSWANDLER
-75V
SCREWS FOR DISMOUNTING CABINET PART.
SCHRAUBEN FÜR ABMONTIERUNG DER KABINETSEITE.
SKRUER FOR AFMONTERING AF KABINETSIDE.